



SETTING UP YOUR NL403 BACKPACK 190442



1. Assemble Pump Handle

Slide handle onto shaft and line up holes. Thread bolt through handle and shaft and securely tighten. Thread on lock nut and tighten using a 13mm (or adjustable) wrench. Handle can be mounted on left or right depending on user preference. See manual for all information of backpack. **(See Figure A)**

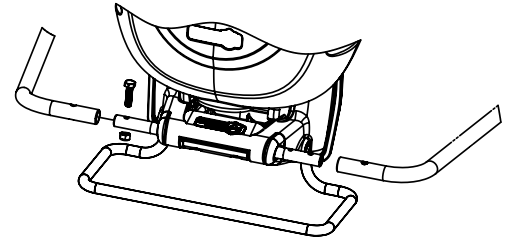


Figure A

2. Assemble 18" Extension

Remove cap and place 182786 check valve inside of 182662 extension. Then place nozzle on extension and fasten tightly. **(See Figure B)**

Note: Check valve must always be used.

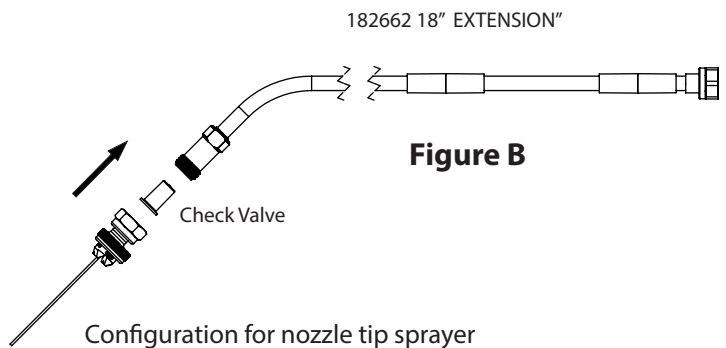


Figure B

2. Assemble Shut-off to Hose

Screw on SS Shut-off to end of hose from backpack **(See Figure C)**

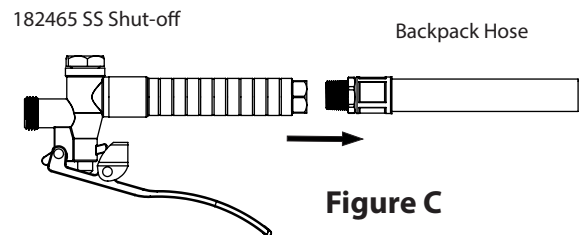


Figure C

3. Assemble Wand to Shut-off

Screw on Wand Assembly to SS Shut-off **(See Figure D)**

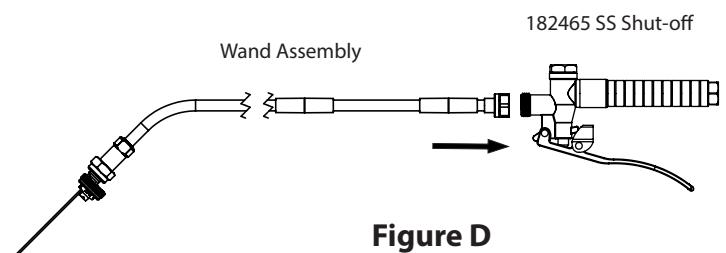


Figure D


PARTS INCLUDED WITH YOUR
NL403 BACKPACK
190442



182786
CHECK VALVE




181756
PUMP HANDLE
BOLT



182659
ASSEMBLY 18"
BRASS WAND




181757
PUMP HANDLE
NUT



182379
4-WAY
BRASS NOZZLE



182006
FOLDING HANDLE
INSTRUCTIONS

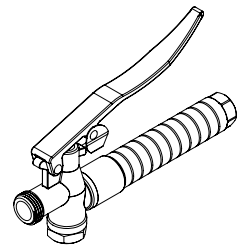

182465
SS SHUT-OFF



182618
WARRANTY CARD



182616
BACKPACK MANUAL



181889
SHOULDER HARNESS